


ASSEMBLY INSTRUCTION

DISPLAY CABINET BHA005

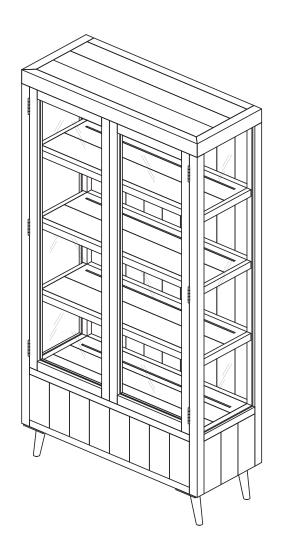

CONTAIN 2 PARTS

• Part 1: Fully assembled cabinet

• Part 2: Four angle legs

HARDWARE PACK



Bolt (16pcs) Φ 8 x 20



Washer (16pcs) Φ 8 x 19 x 1.2




Hex Key (1pc) Φ 4

RECLAIMED®


DISPLAY CABINET BHA005

Lay all parts on a blanket to prevent scratching. Carefully lift each part

• **Step 1:** Pull the **Drawer** out of the cabinet by turning the drawer's stopper anti-clockwize.

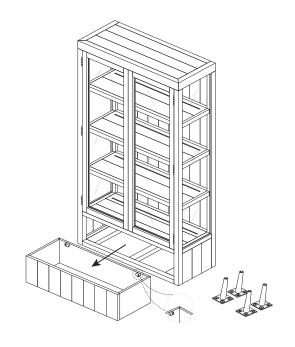


• Step 2: Lie the cabinet flat on the ground

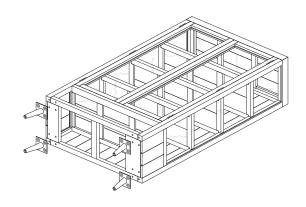

• Step 3: Fit the 4 angle legs to the cabinet's corner locations by using bolts and washers.

Ensure that the legs point to the outside, then tighten the bolts by using the hex key provided.


(note: please match the leg with its number to the top's section that has the same number)

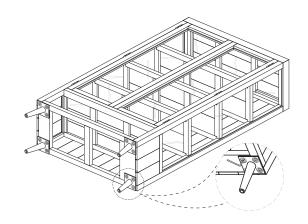


ERECLAIMED®

DISPLAY CABINET BHA005


• Step 4: Stand the cabinet up, then adjust the rubber pin under each leg until each rubber pin touches the ground, so that your cabinet will be in balance.

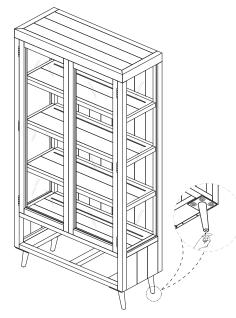

• Step 5: Insert the drawer and turn the drawer stops up to prevent the drawers from falling out when you open.

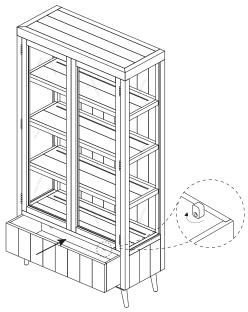

The assembly is now completed!

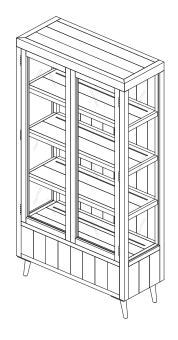

ENJOY YOUR NEW RECLAIMED PRODUCT

For further information, please visit our website www.pgt-reclaimed.com