

ASSEMBLY INSTRUCTION


ROUND DINING TABLE

WFD039/SK




CONTAIN 2 PARTS


- **Part 1:** Fully assembled top
- **Part 2:** 3 timber legs

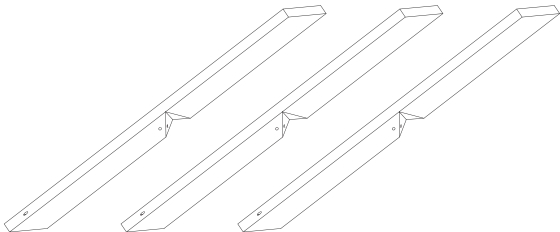


HARDWARE PACK

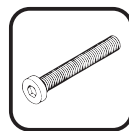

Bolt (6pcs)
Φ 8 x 80

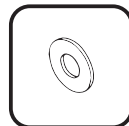

Washer (6pcs)
Φ 8 x 19 x 1.2

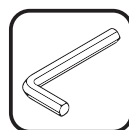

Hex Key (1pc)
Φ 6


ROUND DINING TABLE WFD039/SK

Preparation:


Lay all parts on a blanket to prevent scratching.
Carefully lift each part




Note: Before you assemble the legs to the table's top, please make sure the holes at the end of each leg are facing in the opposite direction of the table's top, so you can insert the bolts to connect the legs with the table top.

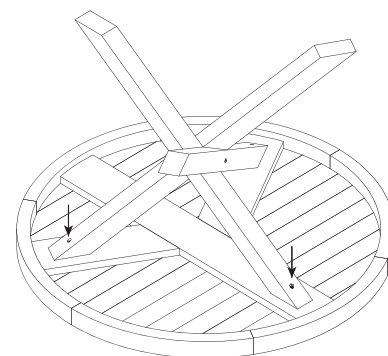


- **Step 1:** Join L1 and L2 together using bolts and washers, tighten the bolt by hand only. Make sure the concave of L1 match with the edge of L2 and creating 90° angle.
(Note: Legs with holes to catch bolts directed to the floor)

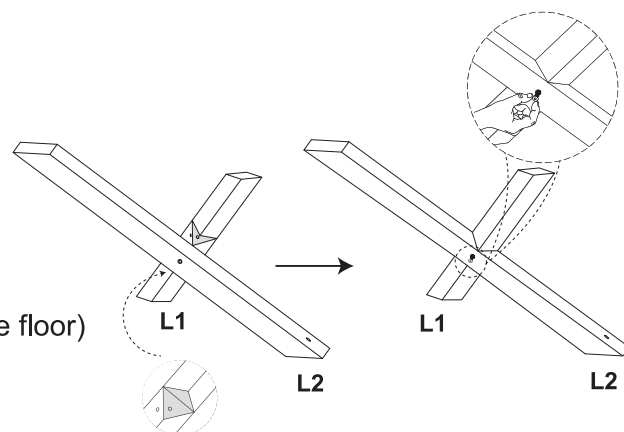


- **Step 2:** Join the 3rd leg using bolts & washers, tighten the bolts by hand only. Make sure the concave of L2 match with the edge of L3, and L3 with L1 are similar, all creating 90° angle.

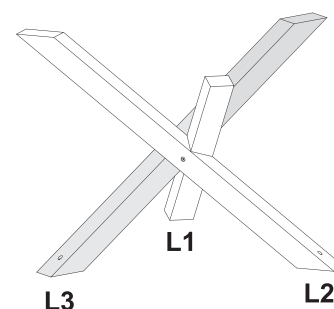


- **Step 3:** Turn the top section up side down.

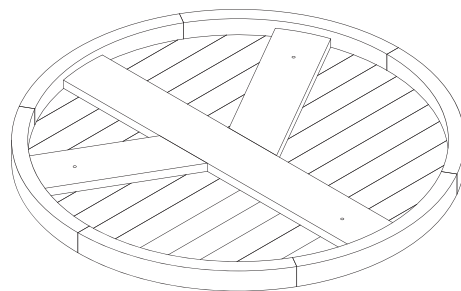


- **Step 4:** Fit the assembled legs into the top with bolts and washers. Tighten all bolts by hand first.

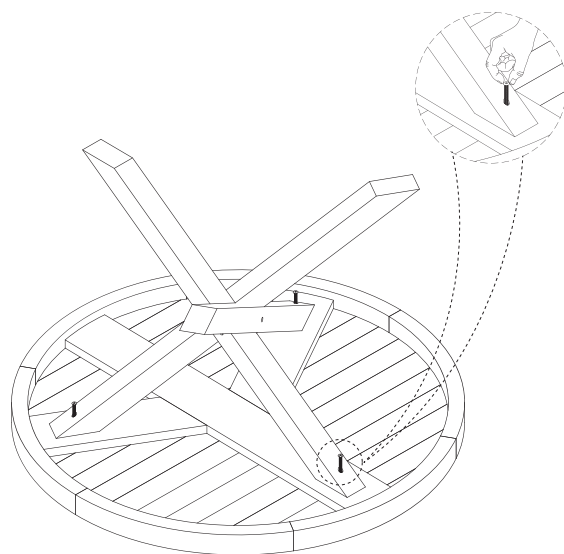

- **Step 5:** After the 3 legs are in their correct position, tighten the bolts at the legs⁽¹⁾ and the top section⁽²⁾ with hex key.

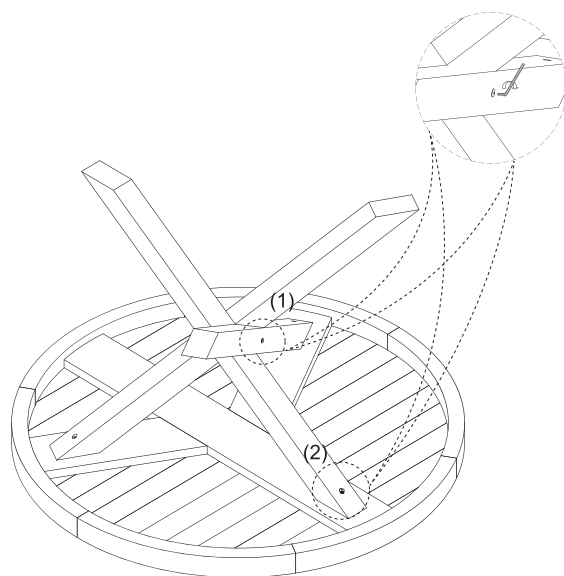

- **Step 6:** Turn the table over. Adjust the rubber pin under each leg until each rubber pin touches the ground, so that your table will be in balance.

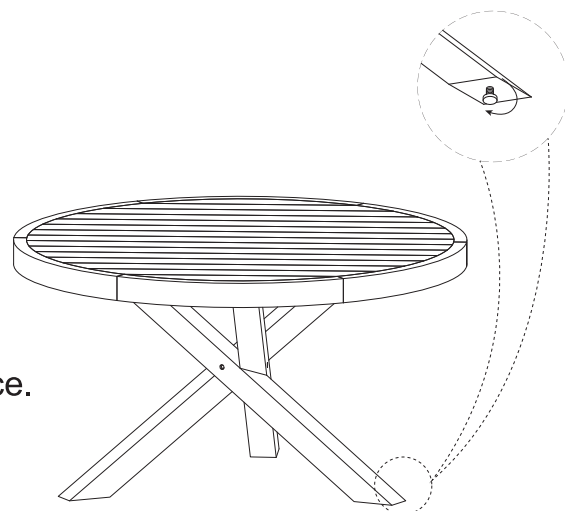

The assembly is now completed!



ENJOY YOUR NEW P.G.T. RECLAIMED® PRODUCT

For further information, please visit our website www.pgt-reclaimed.com