



### A

**1.** Plug remote control A into the wall outlet.

**2.** Press the power button on remote control A for 1.5 s.

**3.** Press the power button on remote control B for 1.5 s.

**4.** Press the power button on remote control A for 1.5 s.

**5.** Plug remote control B into the wall outlet.

**6.** Press the power button on remote control B for 1.5 s.

**7.** Press the power button on remote control A for 1.5 s.

**8.** Press the power button on remote control B for 1.5 s.

**3 min** (3-minute wait time)

**i**

R1, R2, R3

TEMPUR

**!**

**1.** Press the power button on remote control A for 5 s.

**2.** Press the power button on remote control B for 5 s.

**3.** Press the power button on remote control A for 5 s.

### B

**1.** Plug remote control A into the wall outlet.

**2.** Press the power button on remote control A for 1.5 s.

**3.** Press the power button on remote control B for 1.5 s.

**4.** Press the power button on remote control A for 1.5 s.

**5.** Press the power button on remote control B for 1.5 s.

**3 min** (3-minute wait time)

**A**

**1.** Press the power button on remote control R2 for 5 s.

**2.** Press the power button on remote control R3 for 5 s.

**3.** Press the power button on remote control R1 for 5 s.

**4.** Press the power button on remote control R2 for 5 s.

**5 A/B/C/D/E**

**B**

**1.** Press the power button on remote control R1 for 1 min.

**2.** Press the power button on remote control R2 for 5 s.

**3.** Press the power button on remote control R3 for 5 s.

**4.** Press the power button on remote control R1 for 5 s.

**5 A/B/C/D/E**

