


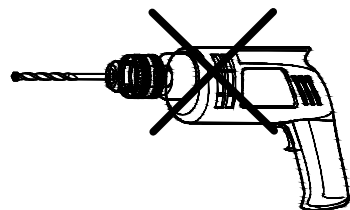

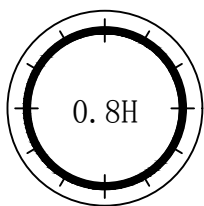
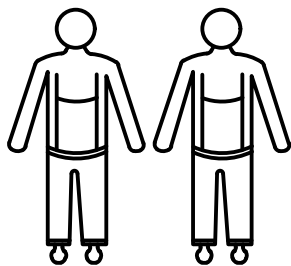
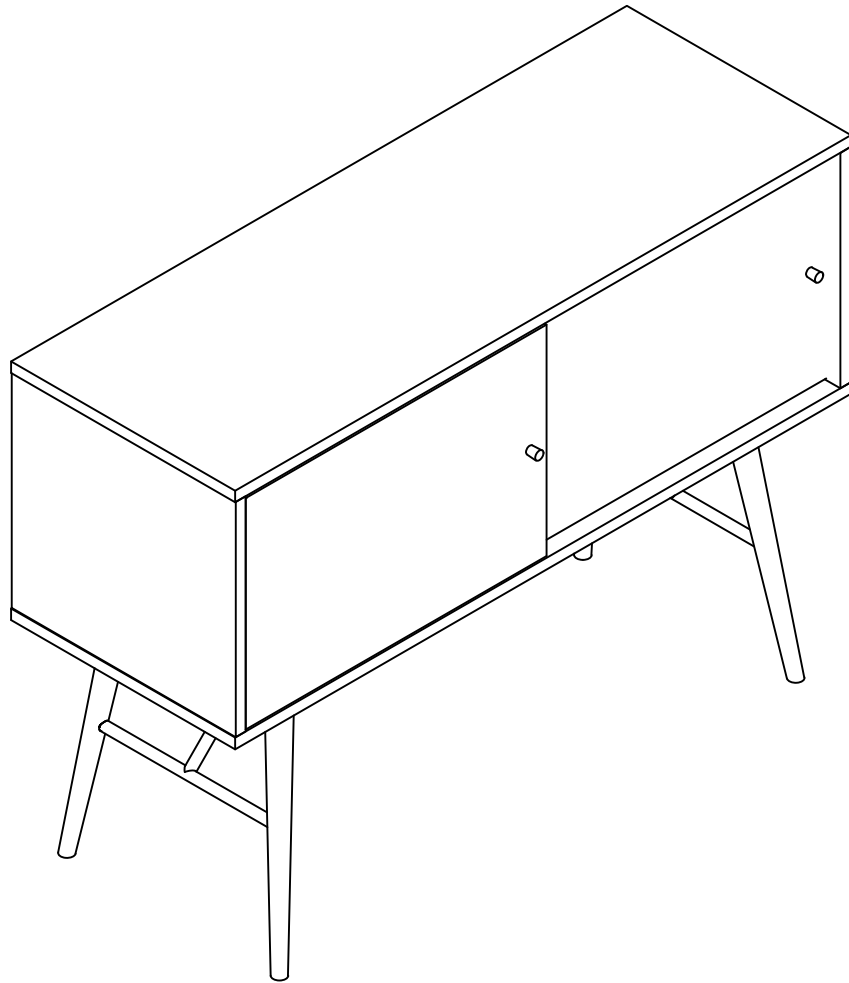


# J9781

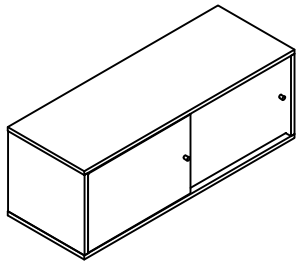

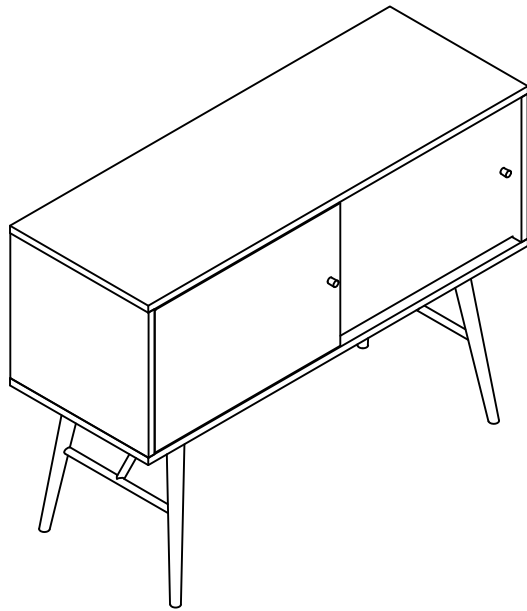


① x1



② x2



③ x2



④ x2

A\*18



M6\*15

B\*2



Ø6\*16\*2

C\*1



M4

D\*4



Ø10

E\*4



Φ 8\*40

F\*4




M3\*16

G\*4




M4\*35

H\*2




L=350


01

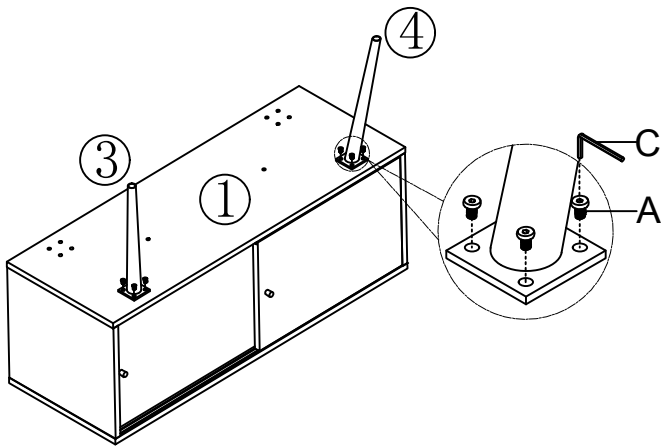

02

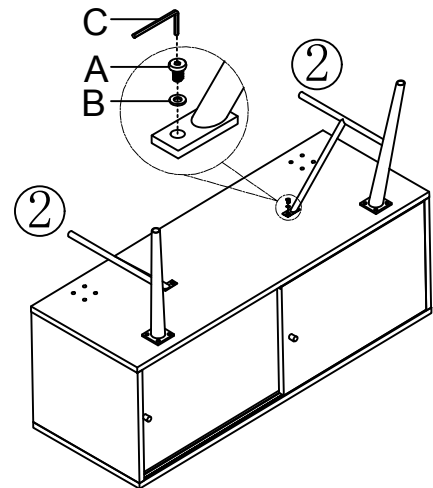


03



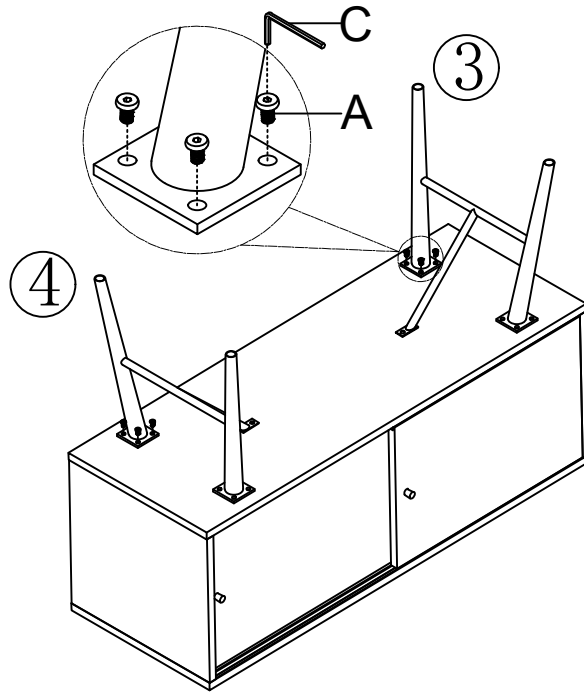


04

The handle of drawer and door need to be installed outside.

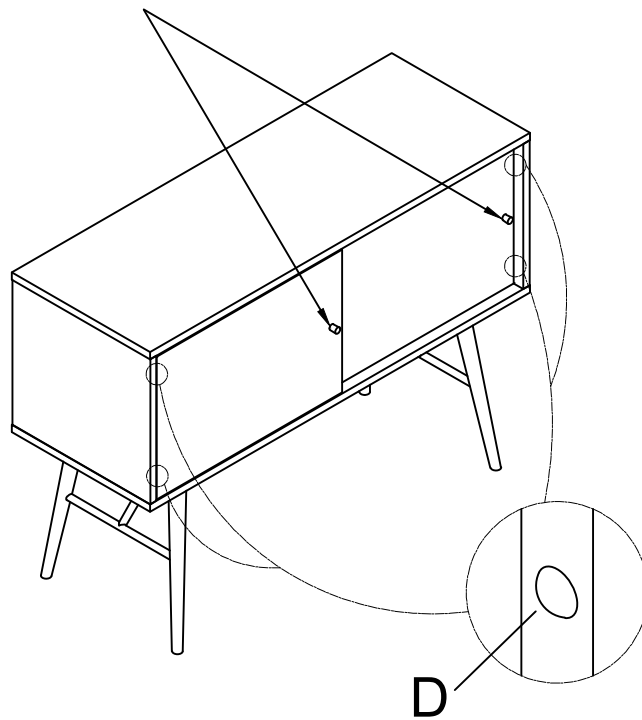

05

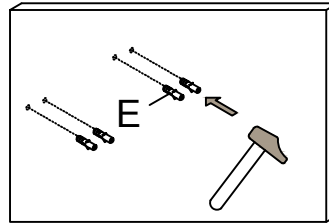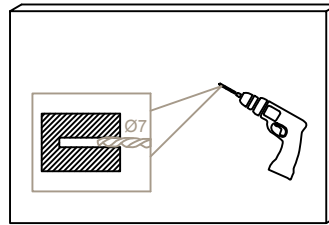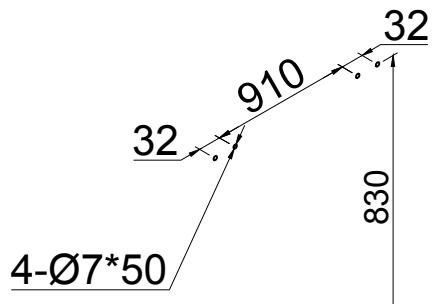

06

