

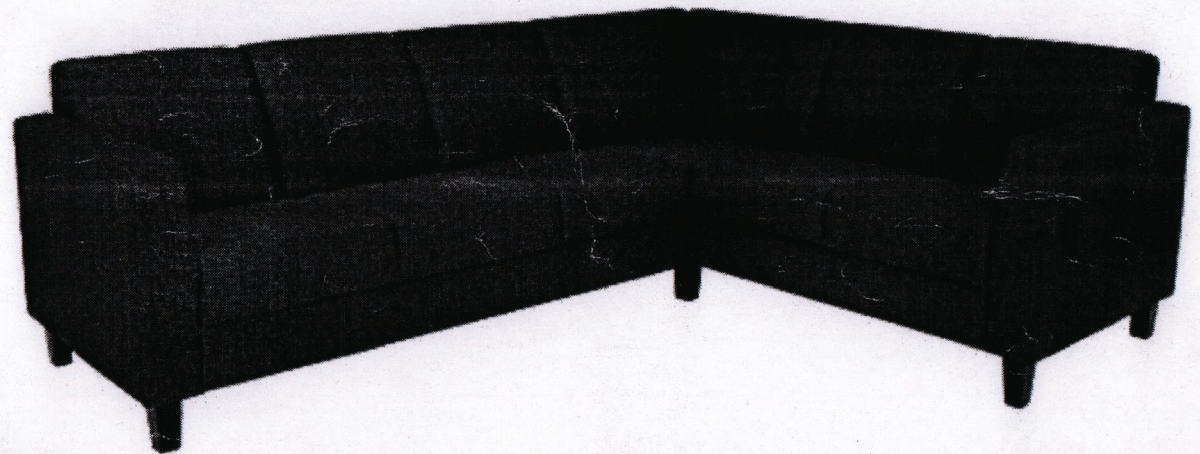


# RHODES

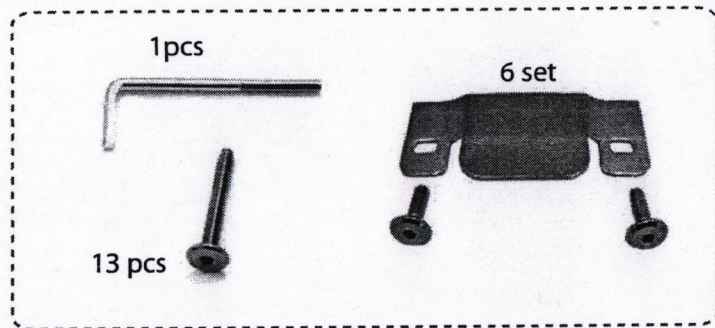


1. Place the armrests horizontally. Assemble the legs to the armrests, in case of the angle, to the frame.

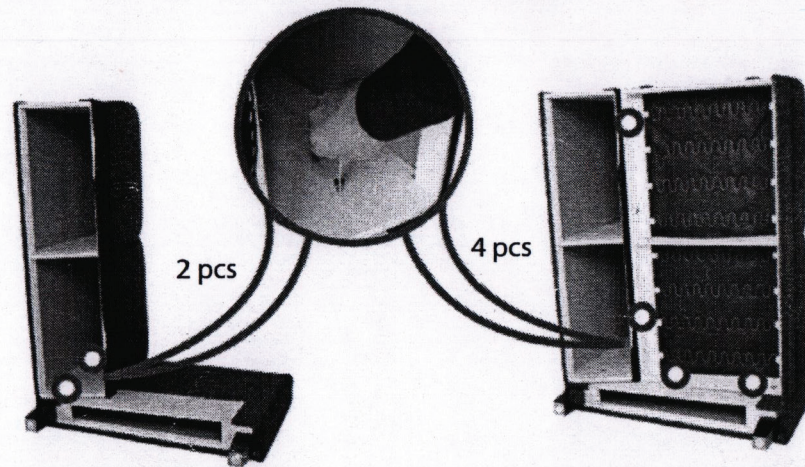

2. Place the armrest in upright position to the backrest and connect the parts with two bolts. Do not tighten the backrest bolts before you have fixed the seat part.

3. Place the seat between the backrest and the armrest. Then connect both parts to the seat with 2 bolts (for 3 seater version use 3 bolts for the backrest). Bolts direction have to be seat-frame to backrest/ armrest.

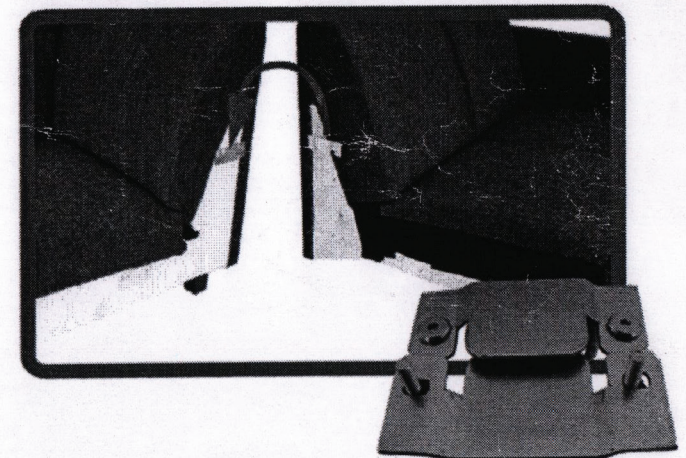

4. Assemble the sofa parts with clips. Clips in upright direction have been placed by the factory to the corner module. Clips in downright position must be placed to that side of the sofa that you want to connect to the corner piece.