


ASSEMBLY INSTRUCTION
BUFFET CABINET
BHD001

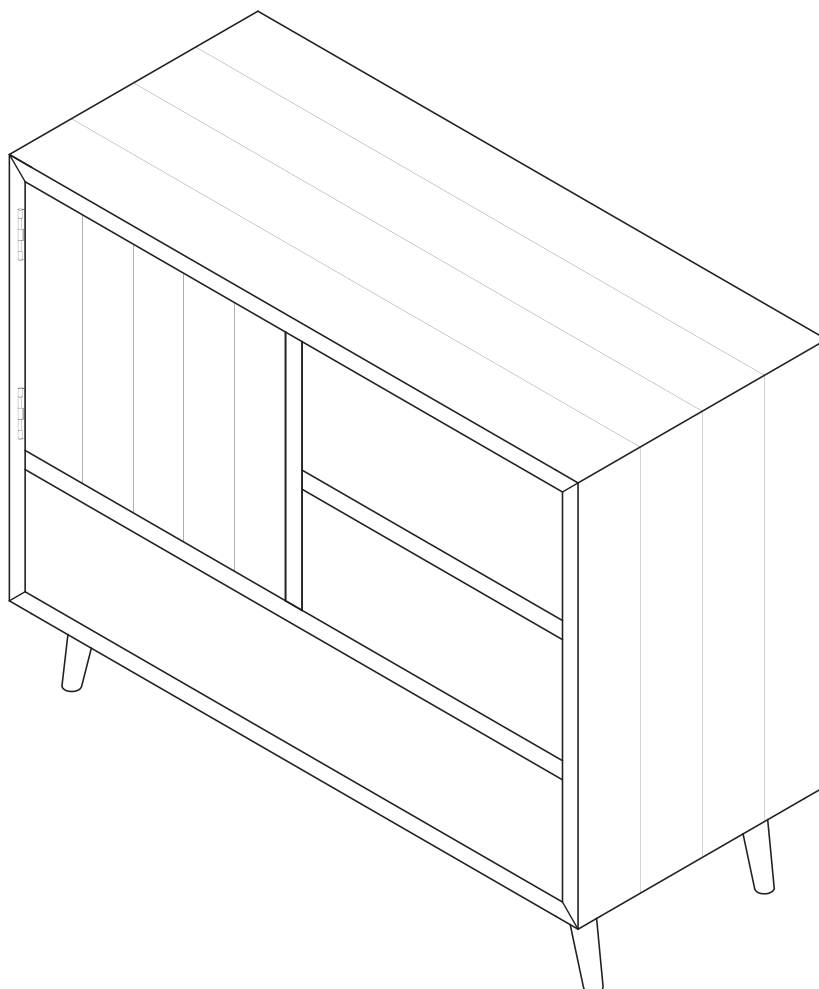


CONTAIN 2 PARTS

- **Part 1:** Fully assembled cabinet
- **Part 2:** Four angle legs


HARDWARE PACK



Bolt (16pcs)
Φ 8 x 20

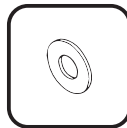

Washer (16pcs)
Φ 8 x 19 x 1.2

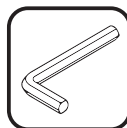


Hex Key (1pc)
Φ 4


BUFFET CABINET **BHD001**

*Lay all parts on a blanket to prevent scratching.
Carefully lift each part*

- **Step 1:** Pull the **Drawers** out

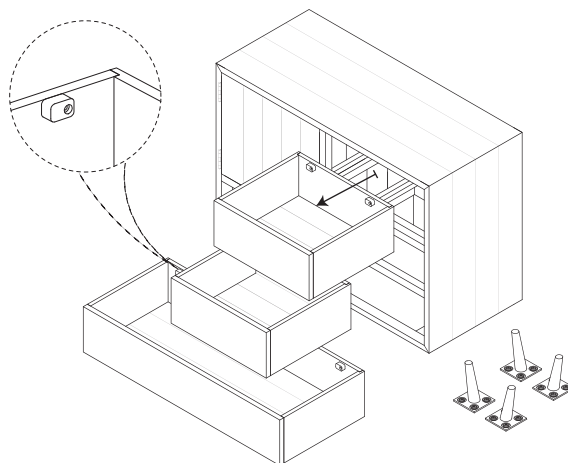


- **Step 2:** Turn the cabinet up side down

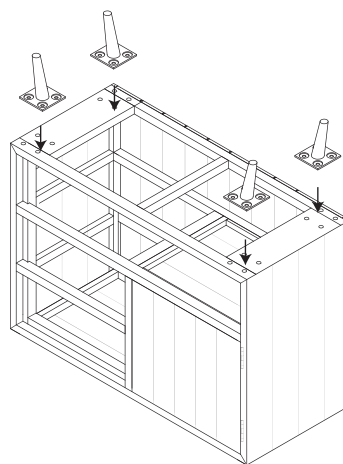


- **Step 3:** Fit the 4 **angle legs** to the cabinet's corner locations by using bolts and washers. Ensure that the legs point to the outside, then tighten the bolts by using the hex key provided.


(note: please match the leg with its number to the top's section that has the same number)

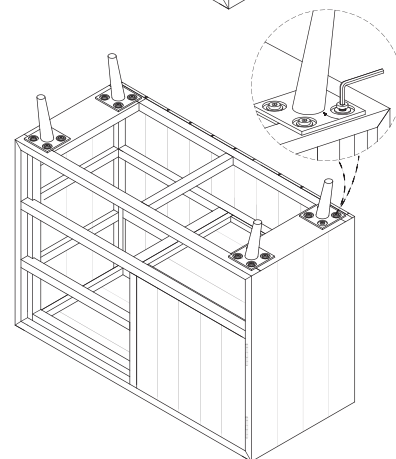


- **Step 4:** Turn the cabinet over, then adjust the **rubber pin** under each leg until each rubber pin touches the ground, so that your cabinet will be in balance.

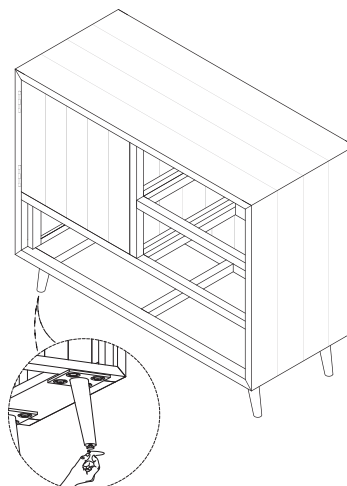

- **Step 5:** Insert the drawers and turn the **drawer stops** up to prevent the drawers from falling out when you open

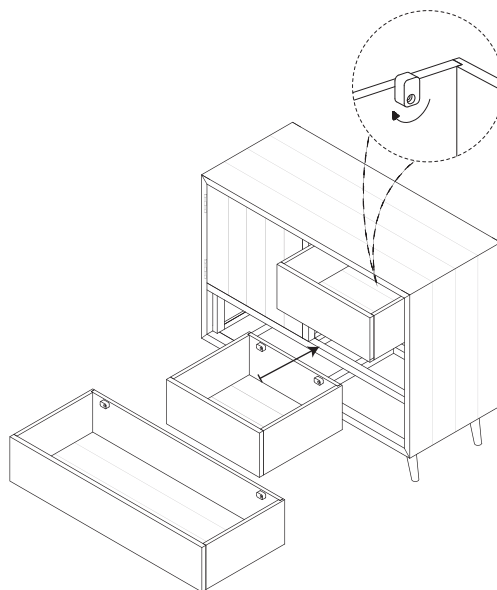

The assembly is now completed!

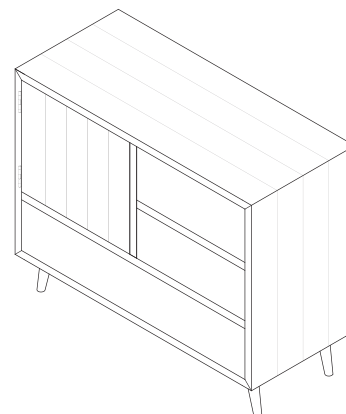

ENJOY YOUR NEW PGT RECLAIMED[®] PRODUCT

For further information, please visit our website www.pgt-reclaimed.com